




Sony Cyber-shot DSC-T1 Battery Replacement

Removing battery from camera.

Written By: Rosario

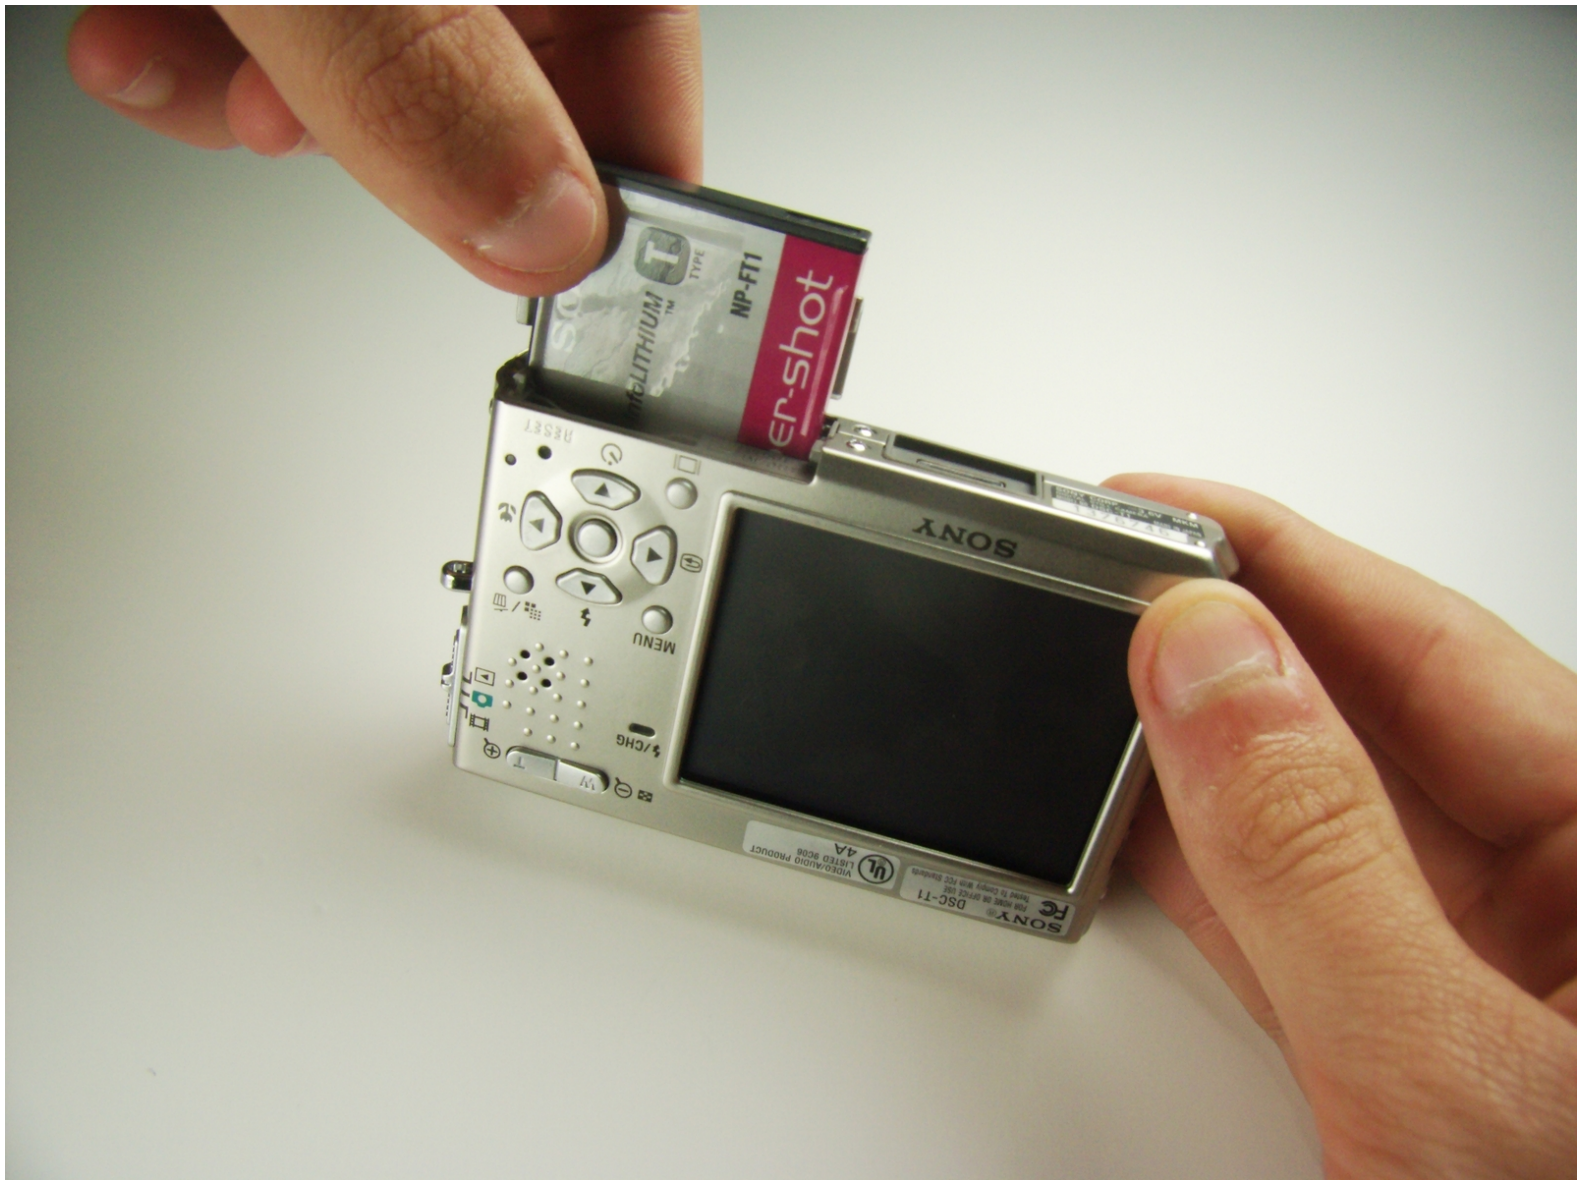


INTRODUCTION

This guide will aid you in the process of replacing the battery.


Step 1 — Battery




- Locate the cover on the bottom of the camera.
- Slide the cover towards the back of the camera.

 Be careful, the battery can slide out on its own.

Step 2

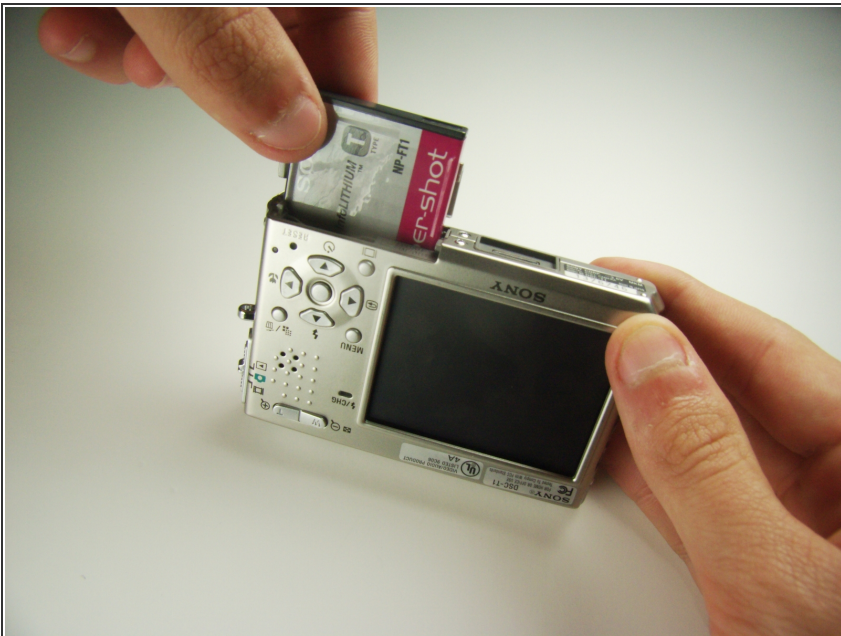

- Carefully remove the exposed battery.
-  If it is difficult to remove, flip over the camera and the battery will slide out.

To reassemble your device, follow these instructions in reverse order.